

USER MANUAL

TRUE HEPA MINI AIR PURIFIER

MODEL: AV-P100

This user manual provides safety and operating instructions.
Please read this user manual thoroughly before using the product.

Copyright © 2026, Arovec, Australia. All Rights Reserved.

TABLE OF CONTENTS

Important Safety Instructions	4
Introduction	5
Getting to Know Your Air Purifier	6
Pre-Operation	7
Operation	8
General Tips	10
Replacing the Filter	11
Cleaning & Care	13
Storage	13
Disposal	13
Troubleshooting	14
Warranty Information	15
Customer Support – Australia	18

PACKAGE CONTENTS

- 1 × H13 True HEPA Mini Air Purifier
- 1 × Filter Package (Pre-Installed)
- 1 × User Manual
- 1 × Warranty Information Card

TABLE OF SPECIFICATIONS

Power Supply	100–240 V~, 50/60 Hz
Rated Power	10 W
Standby Power	0.5 W
Noise Level	17–43 dB
Filter Pack	3 Layered
CADR	86.4 m^3/h
Coverage Area (ACH= 1)*	30m^2
Coverage Area (ACH = 2)	15 m^2
Operating Condition	Temperature: –10°C to 40°C Humidity: ⩽85%RH
Weight	1.36 kg
Dimension	W155 × H240 mm

*ACH (Air Changes per Hour)
ACH indicates how many times the air in a room is fully filtered in one hour.
Higher ACH means faster and more effective air cleaning

THANK YOU FOR CHOOSING TO BUY AN AROVEC AIR PURIFIER

We are here to help you with any questions.
Customer Support – AUSTRALIA

support@arovec.com.au
www.arovec.com.au
@aroveclifestyle

IMPORTANT SAFETY INSTRUCTIONS

- DO NOT use the air purifier before removing the plastic packaging from the filter. It is a fire hazard to use your air purifier with the filter still inside its packaging.
- DO NOT use the air purifier if it has been dropped, damaged, left outside, dropped in water, or not working properly.
- DO NOT use the air purifier if the cord or plug looks damaged.
- DO NOT use the air purifier near gas appliances, fireplaces, stoves, candles, or heating devices.
- DO NOT use the air purifier in an area with insect repellents, burning incense, toxic fumes, flammable dust or oxygen tanks. Always leave at least 1.5 m of clear space from any oxygen being administered.
- DO NOT touch any part of the air purifier or its plug with wet hands.
- DO NOT touch any part of the air purifier or plug with wet hands.
- DO NOT run the power cord under furniture, other appliances, carpet, or cover with rugs, runners or floor coverings.
- ALWAYS tuck away the power cord to prevent tripping accidents.
- DO NOT put the air purifier on an unstable surface e.g., bed or couch.
- DO NOT use the air purifier and power plug on wet or damp surfaces.
- DO NOT put the air purifier in water or liquids.
- DO NOT keep air purifier under an air conditioner to help prevent moisture from getting into the unit.
- DO NOT use the air purifier outdoors.
- DO NOT use the air purifier in a room that can have a big change in temperature. This will help minimise the risk of condensation.
- DO NOT put fingers or any objects into the air inlet/outlet of the air purifier.
- DO NOT use a defective air purifier or attempt to repair/adjust any electrical or mechanical functions, this may cause danger and void the warranty.
- DO NOT let children or people with reduced physical or mental capabilities use or clean the air purifier.
- DO NOT let children play with this appliance or its packaging including plastic bags. Children must be supervised around the air purifier to help keep them safe.
- DO NOT sit on the air purifier or put any objects on top of the unit.
- DO NOT block/obscure the air inlet or outlet. Keep free of anything that could reduce airflow.
- DO NOT spray air fresheners, perfumes or oils on or near the filter.
- DO NOT fit the air purifier with a different power supply unit.
- DO NOT clean the air purifier or change the filter with the power cord plugged in.
- DO NOT use the air purifier for commercial purposes. This appliance is for household use only.
- It is recommended to NOT use the unit with an extension cord to avoid electrical shock or spark.
- TURN OFF the air purifier when it is not being used. Hold the plug and remove it from the electrical source. Do not unplug by pulling the cable.
- WARNING: This air purifier does not remove carbon monoxide or radon from the air. It must not be used to prevent or clean up accidents with combustion processes and hazardous chemicals.

INTRODUCTION

The Arovec AV–P100 Mini Air Purifier helps remove airborne contaminants to improve indoor air quality.It uses an internal fan to draw air through a high–efficiency filtration system.The advanced filtration system captures harmful airborne particles and pollutants.Keep your environment fresh and healthy with the AV–P100.

PRODUCT FEATURES

Compact & Modern Design:
The sleek and compact design fits perfectly on desks, bedside tables, and small spaces while complementing your interior.

3–Speed Fan Control:
Easily adjust airflow with three selectable fan speeds to suit your comfort level.

Timer Function:
Set automatic operation with 2H, 4H, or 8H timer options for convenient and energy–efficient use.

Ambient Light Feature:
Built–in ambient light cycles through seven colours. Lock your preferred colour or turn it off as desired.

1. Preliminary Filter:
   Captures large particles such as dust, pet dander and hair.


2. H13 True HEPA Filter:
   This air purifier contains multiple stage filtration system, which filters out 99.97% harmful pollutants as small as 0.3 μm with 100% ozone–free safe operation.


3. High–Efficiency Activated Carbon Filter:
   Adsorbs various odours and smokes such as cigarette smoke, fumes, cooking smell, pet odours, hazardous gases, and VOCs.

GETTING TO KNOW YOUR AIR PURIFIER


1. Power / Fan Speed Button
2. Fan Speed Indicators
3. Timer Button
4. Timer Indicators
5. Ambient Light / Filter Reset Button
6. Filter Indicator
7. Air Outlet
8. Ambient Light Ring
9. Air Inlet
10. Power Adapter
11. Bottom Cover
12. Ultra-High Efficiency Filter

Top View

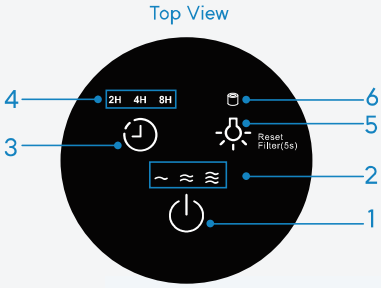

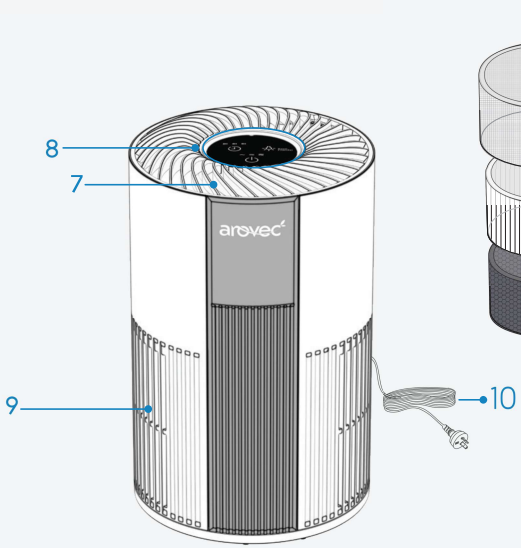

Front View

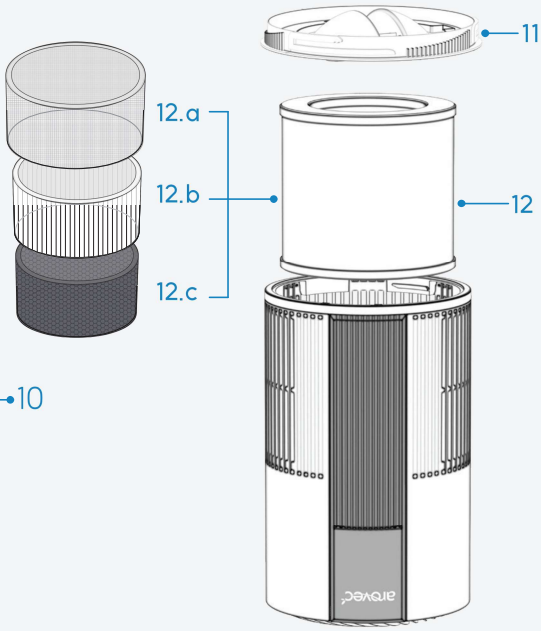

Upside Down View

PRE-OPERATION

The air purifier comes with a filter fitted inside, but they are packaged in plastic. You must remove the filter from its packaging before turning the air purifier ON.

1. Turn the air purifier upside down on a soft cloth.
2. Turn the base cover anticlockwise to unlock the cover. [Figure 1.1]
3. Remove the base cover.
4. Remove the filter from the air purifier. [Figure 1.1]

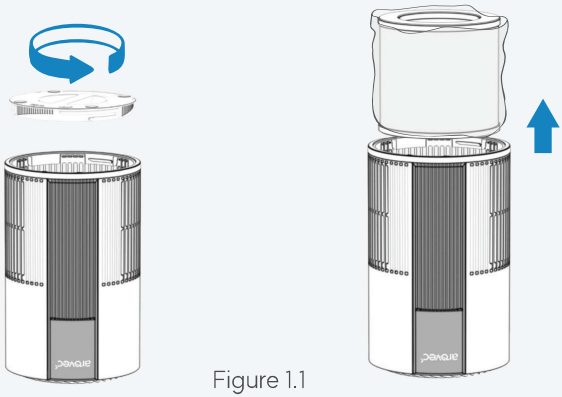


Figure 1.1

5. Remove the filter from its packaging. [Figure 1.2]
6. Put the filter back into the air purifier.
7. Put the base cover back on and turn it clockwise to the lock position. [Figure 1.2]


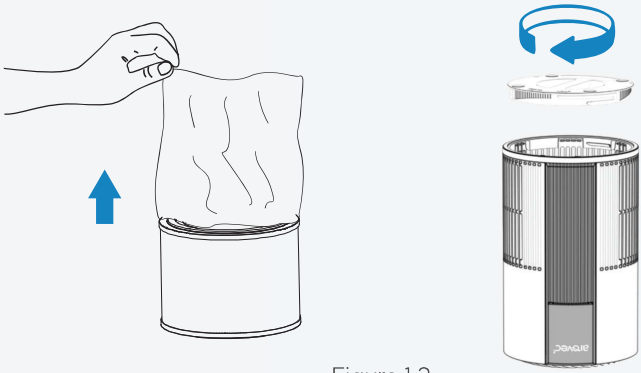


Figure 1.2

OPERATION

CONTROL PANEL:

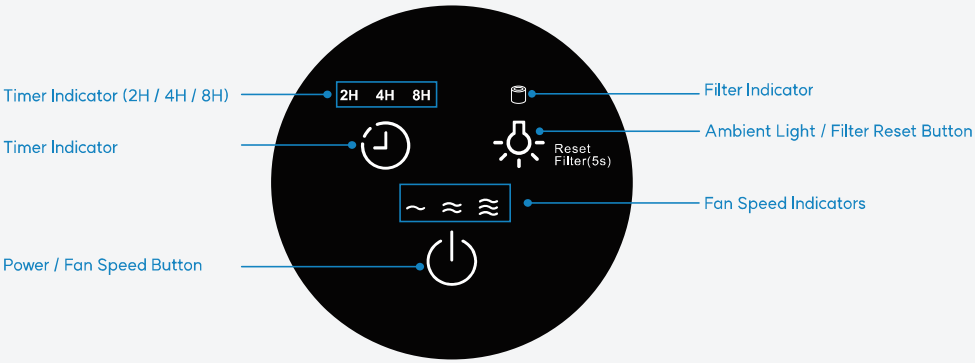

POWER / FAN SPEED

- Press ( )the Power / Fan Speed button once to turn the air purifier ON (~).
- Press again to switch to Speed 2. (≈)
- Press again to switch to Speed 3. (≋)

Each press cycles as follows:

Speed 1 ~ > Speed 2 ≈ > Speed 3 ≋ > OFF

TIMER

- You can set the Timer for 2, 4, or 8 hours.
- press( ) the Timer button repeatedly to select 2H > 4H > 8H > CANCEL
- The corresponding indicator will light up.
- When cancelled, all timer indicators turn off.

AMBIENT LIGHT

- During operation, the ambient light cycles through seven colours by default.
- Press the Ambient Light button once to lock the current colour.
- Press again to turn the light OFF.

FILTER RESET

- When the filter indicator flashes red, the filter needs replacement.
- After replacing the filter, press and hold the Ambient Light / Filter Reset button for 5 seconds to reset the filter timer.

GENERAL TIPS

- The air purifier should be on a flat and level surface with the control panel facing up before switching it ON. [Figure 2.1]
- Leave at least 40 cm of clear space around each side of the purifier when it is ON. [Figure 2.1]

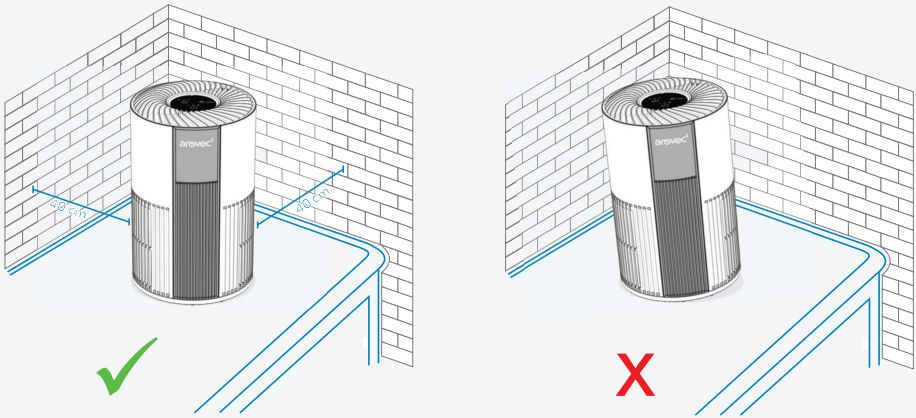


Figure 2.1

- Shut nearby windows when the air purifier is turned ON to help clean the air.
- For best results, use the air purifier for 15–20 minutes at the maximum fan speed, then adjust the fan speed as required.

REPLACING THE FILTER

The ( ) will light up to remind you to replace the filter.

DO NOT wash or reuse the filter. Only use Arovec AV–P100 replacement filter when changing the filter is required. This will help your air purifier to work effectively and last longer.
Replacement filter is available at www.arovec.com.au

WHEN TO REPLACE THE FILTER:

- It's best to change the filter every 4–6 months. You may need to change the filter more often or less often, depending on how much you use your air purifier and how much pollution is in the air.
- You don't need to wait for the ( ) to turn ON to change the filter. You may need to change the filter if you notice any of the following:

– Increased noise from the air purifier when it is switched ON.
– No effective difference in air quality.
– Decreased airflow.
– Unusual odours.
– Clogged filter.

STEPS TO REPLACE THE FILTER

Follow these steps to replace the filter:

1. Turn OFF and unplug the air purifier.
2. Turn the air purifier upside down on a soft cloth.

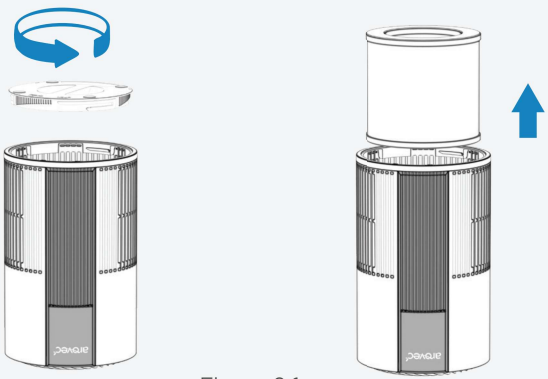


Figure 3.1

3. Clean any remaining dust or hair inside air purifier with a vacuum cleaner, DO NOT use water or any other liquid to clean the air purifier. [Figure 3.2]
4. Remove the new filter from its plastic packaging, place it into the air purifier, and close the filter cover properly.

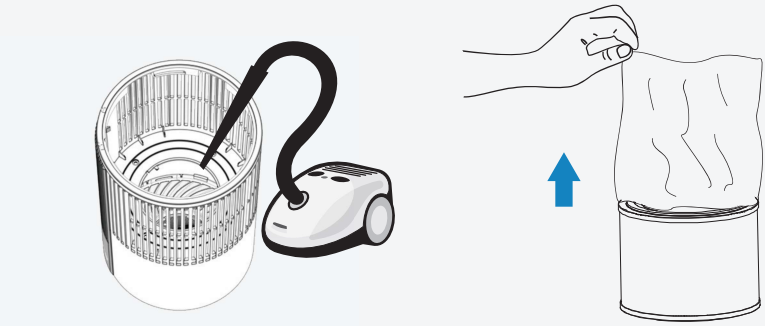


Figure 3.2

RESETTING THE AIR PURIFIER AFTER FILTER REPLACEMENT:

1. If the filter is replaced after the Filter Indicator light [ ] turns on:
- Turn on the air purifier.
- Press and hold the Ambient Light / Filter Reset [ ] button for 5 seconds until the indicator light turns off.
- The air purifier is now reset and ready to use.

2. If the filter is replaced before the Filter Indicator light [ ] turns on:
- Plug in and turn on the air purifier.
- Press and hold the Ambient Light / Filter Reset [ ] button for 5 seconds to rest the filter timer
- The Filter Indicator [ ] will light up red for 3 seconds, then turn off.
- The green ambient light will turn on for 3 seconds, then return to its previous state.
- This confirms that the filter reset has been successfully completed.

CLEANING & CARE

- Turn OFF and unplug the air purifier before you clean it.
- Wipe down the outside of air purifier regularly with a soft and clean cloth.
- DO NOT use any harsh cleaning agents e.g., bleach or alcohol to clean any part of the air purifier.

CLEANING THE FILTER:

To increase the efficiency and life of the filter, clean it at least once a month using a soft brush or vacuum cleaner to remove large particles, hair and dust. Do not clean the filter with water or any other liquids. [Figure 4.1]

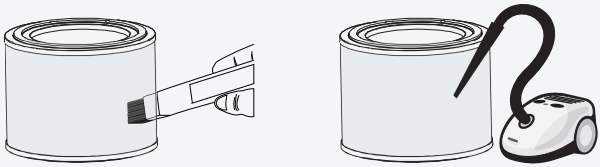


Figure 4.1

STORAGE

- If not using the air purifier for an extended period of time, it is a good idea to wrap the air purifier in plastic packaging and store it in a dry place to avoid moisture damage.
- It is not recommended to store the used filter for long period of time.
- Store the air purifier in an upright position. Do not store anything on the top of air purifier.

DISPOSAL

To prevent possible harm to the environment or human health from uncontrolled waste disposal, separate the unneeded air purifier and its related accessories from other types of waste.
Ask your local council where to dispose of your air purifier and its related accessories. You should not throw away your air purifier and related accessories with the daily normal household waste.

TROUBLESHOOTING

Problem !	Possible Solution ✓
Air purifier won't turn ON	• Confirm the plug is inserted into a powered electrical outlet.
	• Check if there is a power outage.
	• Check whether the leakage switch or fuse in your home has tripped.
	• Ensure the bottom cover is properly installed and securely locked.
	• Make sure the filter has been removed from its packaging and installed correctly.
	• If the issue persists, stop using the unit and contact customer service.
The airflow at the air outlet is weakened	• Check if the filter surface is dirty; clean or replace the filter if necessary.
	• Ensure there are no foreign objects blocking the air inlet or outlet.
	• Make sure the air purifier is placed on a hard, flat surface.
	• Press the Power / Fan Speed button to increase the fan speed.
The noise is too loud	• Check for foreign objects inside the air outlet or fan area.
	• Ensure the unit is placed on a stable and level surface.
	• Reduce the fan speed if operating at high speed.
	• If abnormal noise continues, turn off and unplug the unit and contact customer service.
Air purifier emits a bad smell	• A slight plastic smell during initial use is normal.
	• If the filter is dirty, clean or replace the filter.
	• Ensure essential oils are only applied to the aroma box sponge.
	• If a burning smell occurs, turn off and unplug immediately and contact customer service.
The filter has been replaced but the reminder is still ON	• After replacing the filter, press and hold the Light (Filter Reset) button for 5 seconds.
	• The light will turn solid green for 3 seconds, then return to normal display, confirming successful reset.
Air purification quality is low	• Check whether the filter needs replacement.
	• Remove any debris blocking the air inlet or outlet.
	• Increase the fan speed.
	• Ensure doors and windows are closed during operation.

WARRANTY INFORMATION

Arovec products are designed and manufactured to the highest quality standards. Your product is covered for parts and labour for 2 years, which includes 1–year standard warranty and 1–additional year upon registration at arovec.com.au/warranty (free of charge) within 14 days from the date of purchase.

This warranty disclaimer applies to all products purchased via the website www.arovec.com.au (hereinafter "Products") or a third party seller authorised by Arovec.

NOTE: When the product is purchased from an authorised third party seller, for warranty claim, return and replacement of a defective product, the inquiry should be lodged on the related third party seller.

(1) Warranty Against Defects

1.1 For Brand–new Products:

We provide a 12–month standard warranty against defects with the Products, from the date of purchase.

We provide an optional additional free 12–month extended warranty against defects with the Products (resulting in a 24–month warranty against defects with the Products, from the date of purchase).

In order to claim the additional 12–month extended warranty, you must register your Product (free of charge) online at www.arovec.com.au, within 14 days of the date of purchase. While registering, make sure that the related data entry including the date of purchase is accurate.

In the event of a defect with the Product, you may be entitled to have the Product replaced in order to be entitled to a replacement Product, you must:

- immediately stop using the Product; and
- notify us of the defect during the warranty period.

in order to claim a replacement Product, you must contact us using the details at the CUSTOMER SUPPORT section, to notify us of the defect, providing your proof of purchase and warranty registration confirmation as well as your contact details.

You may either:

- return the product for our further investigation; or
- send us a video of the defective Product, which demonstrates to our reasonable satisfaction that the Product is defective and undertake to safely dispose of the defective Product. For safety reasons, you must not continue to use the defective Product.

Upon receipt of the defective Product, or a video of the defective Product, we will inspect it. If the defect is the result of a manufacturer fault, we will determine if the fault requires a replacement or repair and either send you a replacement Product or effect a repair.
This warranty against defects is in addition to any other rights and remedies to which you may be entitled under Australian law.

To Clarify:

What is covered by the warranty:

- The repair or replacement of your Arovec product (at Arovec's discretion) if the product is found to be defective due to faulty manufacture. Arovec reserves the right to determine if the fault requires a replacement or repair.
- Packaging and instructions of a faulty product may also be replaced if damaged.
- This warranty is valid for using your personal use of your device within Australia only.

What is not covered by the warranty:

- Using the products for commercial purposes, or anything other than normal domestic personal use.
- Use of the product outside Australia.
- Accidental damage or faults caused by negligence, misuse, vandalism or neglect.
- Damage or faults caused by not following the instructions in the user manual.
- Unsupervised use by children under the age of 18.
- Repairs or alterations carried out by parties other than Arovec or an authorised agent.
- Any other conditions not listed above, are not covered by Arovec warranty.

1.2 For Renew Products:

A renewed Product, which is purchased from a seller that is authorised by Arovec, is only covered under six months warranty and is not eligible for the free warranty extension.

1.3 For Replacements:

Replacement of a brand–new Product is only covered by the one–year standard warranty from the date of replacement arrangement and is not eligible for the one–additional year
free warranty extension.
Replacement of a renewed Product that is purchased from a seller and is authorised by Arovec is only covered by six months warranty from the date of replacement arrangement and is not eligible for the free warranty extension.

(2) Australian Consumer Law:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

(3) Disclaimer:

You are solely responsible for evaluating the Product and determining whether it is fit for your purpose.
You acknowledge and agree that Product is not safe for use by children.
You acknowledge and agree that working with the Product is dangerous and carries the risk of electric shock, burns, lacerations, other injuries and death.
You acknowledge that you use the Product at your own risk and that you are responsible at all times for evaluating whether or not it is safe to use the Product.

(4) Limitation of Liability:

In addition to the requirements set out in clause 1 of this warranty and disclaimer document, the warranty provided under that clause will not apply:

- If a defect with the Product results in any way from some act or omission by you in relation to the appropriate care, maintenance and/or use of the Product; or
- If a defect with the Product results from ordinary wear and tear; or
- If you fail to follow our or the manufacturer's instructions for care, maintenance and/or use of the Product; or
- If you are unable to provide proof of purchase.

Except as otherwise provided by law, we accept no liability for any loss, damage or injury which may arise in any way from the use of the Product by you or by any other person.
Except as otherwise provided in this warranty and disclaimer, to the maximum extent permitted by law, we exclude all conditions and warranties implied by custom, law or statute, and we expressly disclaim all warranties of any kind including but not limited to implied warranties that the Product is fit for a particular purpose.
You hereby agree that we are not liable for any direct, indirect, consequential or incidental loss or damage which may result from your use of the Product.
Except as otherwise provided by law or as otherwise set out in this warranty and disclaimer, our liability to you shall be limited to the cost of replacement of the Product, together with your reasonable costs of postage and/or delivery in connection with your returning of the Product.

(5) Indemnity:

You agree to defend, indemnify and hold us and our officers, directors, employees, contractors, members, agents and licensees harmless from and against any and all claims, charges, actions, liabilities, investigations, demands and similar including but not limited to any costs, losses, damages whether direct, indirect, consequential or special and all legal fees resulting from your use of the Product, including but not limited to any third party claims.



CUSTOMER SUPPORT-AUSTRALIA

Feel free to contact our helpful customer support team with any questions or inquiries regarding your product.
Your satisfaction is our priority.

Ausbrilliant Brands
PO Box 2, Ermington NSW 1700, Australia

www.arovec.com.au
support@arovec.com.au
Please provide your order number when you contact customer support.
Alternatively, you may contact us using the Contact Us form on the website.



Questions or Concerns?

support@arovec.com.au

V1.0326